


SMPM EXTRACTION TOOL


PART NUMBER DESCRIPTION

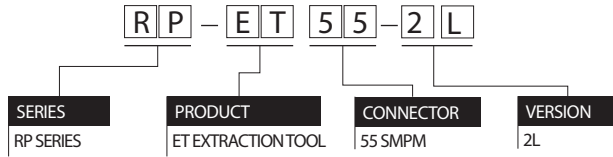

MATERIAL AND FINISH

	MATERIAL	FINISH
BODY	STAINLESS STEEL	N/A

STANDARD DIMENSIONS

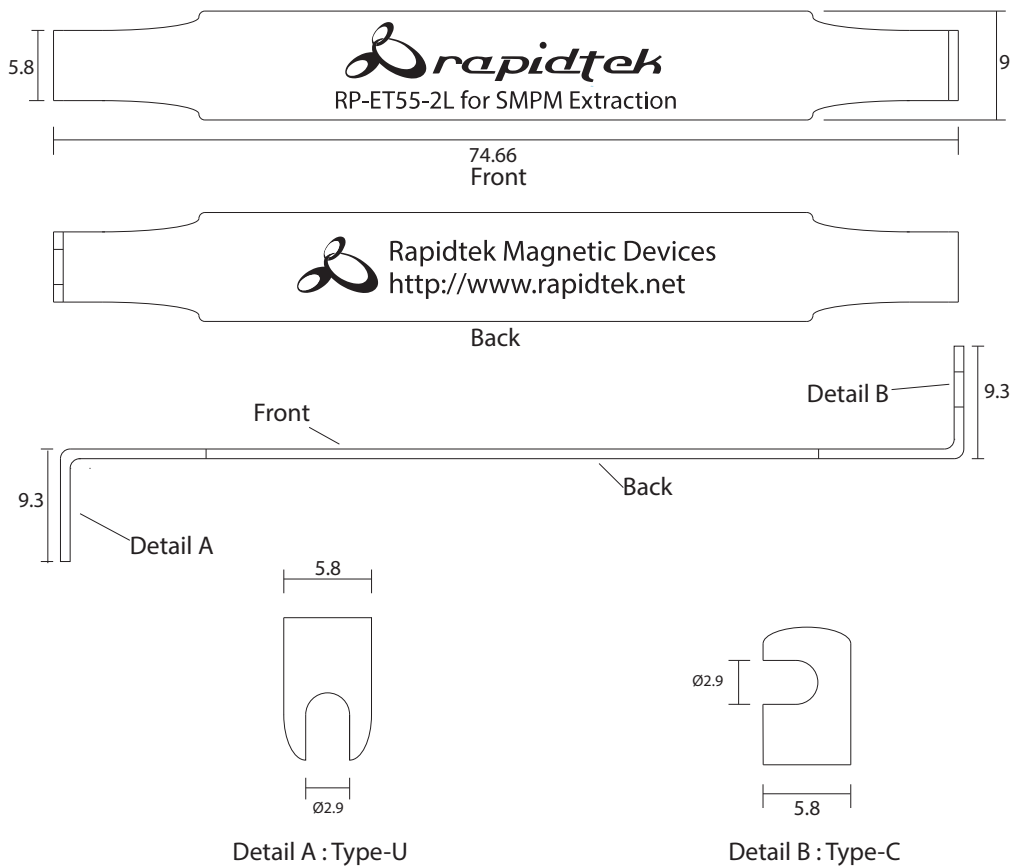

**RAPIDTEK**  
RF COAXIAL PRODUCTS

## APPLICATION NOTE

Type-U disassembly and Type-C disassembly both can be used to extract SMPM Connector.



Type-C



Type-U

## How to use

1. Put the disassembly into the gap between SMPM connectors.
2. Pull out the SMPM connector in the direction perpendicular to the connector.

